



**NOTE:**  
 LEAVE A 10mm GAP BETWEEN SADDLE FLASHING AND CAP FLASHING AT WALL TO ALLOW FOR EXPANSION AND SEAL WITH SEALANT UNDER CAP.

SCALE 1:5

<b>STO/ MONOTEK</b>	<b>STOARMAT RENDER SYSTEM</b>	<b>FCS 504</b>
	<b>METAL SADDLE FLASHING &amp; CAP INSTALL - ISOMETRIC</b>	<b>2017</b>