


STO LITE SHEETS

1. KEEP DRY BEFORE USING.
2. READ SPECIFICATIONS AND CHECK DRAWINGS, DETAILS, FRAMING, UNDERLAY, FLASHING TAPES, AND BLOCKING IS SATISFACTORY
3. INSTALL STO PVC TRAY AND JOINERY FLASHINGS AS PER STO DETAILS (BUILDER TO SUPPLY ALUMINIUM HEAD FLASHINGS WITH STOPENDS)
4. CHECK LAYOUT AND INSTALL SHEETS VERTICALLY STARTING FROM BOTTOM PLATE
5. STAGGER VERTICAL SHEET JOINTS TO AVOID CONTINUOUS JOINS - EXCEPT AT CONTROL JOINTS
6. SECURE SHEETS WITH FIXINGS AS PER MANUFACTURER DETAILS
7. BUTT INTERNAL CORNERS
8. MEASURE DISTANCES ACCURATELY TO AVOID NARROW IN FILLS OR GAPS

SAFE WORKING PRACTICE

1. HAVE SUFFICIENT PEOPLE TO LIFT SHEETS ON SITE
2. WEAR PROTECTIVE CLOTHING, EYE AND EAR PROTECTION AND DUST MASK OR RESPIRATOR WHEN CUTTING OR SANDING
3. USE A CIRCULAR SAW FITTED WITH A DIAMOND BLADE OR F/C SCRIBER AND HEPA VACUUM WHEN CUTTING
4. CONTAIN CUTTING AREA TO MINIMIZE DUST - HEPA VACUUM UP RESIDUE
5. PROVIDE SUITABLE ACCESS PLATFORMS, EQUIPMENT AND TOOLS TO CARRY OUT THE WORK
6. COMPLY WITH HEALTH AND SAFETY REGULATIONS AND MAINTAIN FIRST AID EQUIPMENT AS PER THE LEGISLATION

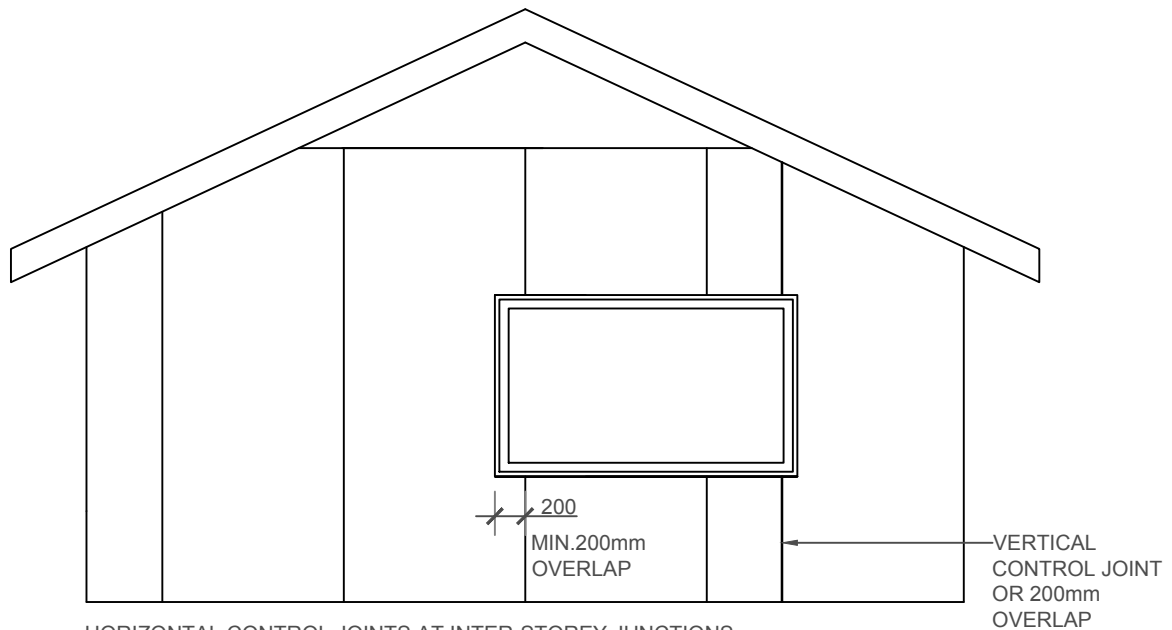

HORIZONTAL CONTROL JOINTS AT INTER-STOREY JUNCTIONS
OR AT 5400mm MAX. ON CONTINUOUS STUDS

VERTICAL CONTROL JOINTS - 5400mm MAX. CTRS **OR AT**
 DISSIMILAR MATERIAL

SCALE 1:50

STOLITE SYSTEM	STOLITE CONSTRUCTION SYSTEM	SL 008
	SHEET LAYOUT	2017