


ALL EDGES MUST BE SUPPORTED WITH H3.1 CAVITY BATTENS ON TIMBER FRAMING. ALL SHEETS FIXED VERTICALLY

CAVITY BATTEN LAYOUT AND FIXINGS AS PER MANUFACTURERS DETAILS AND WIND ZONES

FIXINGS MIN. 12mm FROM SHEET EDGES 1-2mm GAP IN SHEETS

BACK PRIME ANY AREAS SUBJECT TO MOISTURE

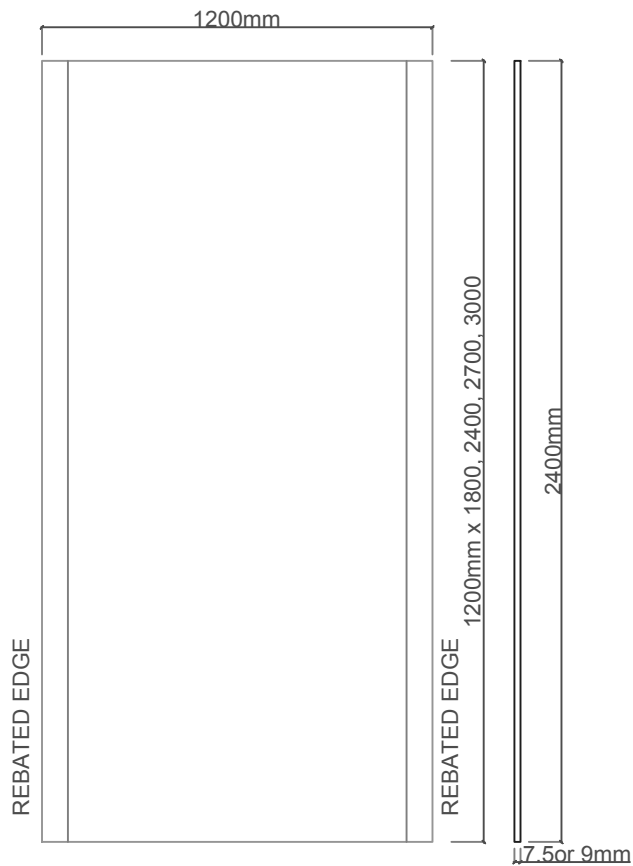

7.5 & 9mm SHEET THICKNESSES AVAILABLE

SCALE NTS

<b>STO/ MONOTEK</b>	<b>STOARMAT RENDER SYSTEM FIBRE CEMENT SHEET INFORMATION</b>	<b>FCS 006</b>
		<b>2017</b>