


ALL EDGES MUST BE  
SUPPORTED WITH H3.1 CAVITY  
BATTENS ON TIMBER FRAMING.  
ALL SHEETS FIXED VERTICALLY

CAVITY BATTEN LAYOUT AND  
FIXINGS AS PER  
MANUFACTURERS DETAILS AND  
WIND ZONES

FIXINGS MIN.12mm FROM SHEET  
EDGES 1-2mm GAP IN SHEETS

BACK PRIME ANY AREAS  
SUBJECT TO MOISTURE

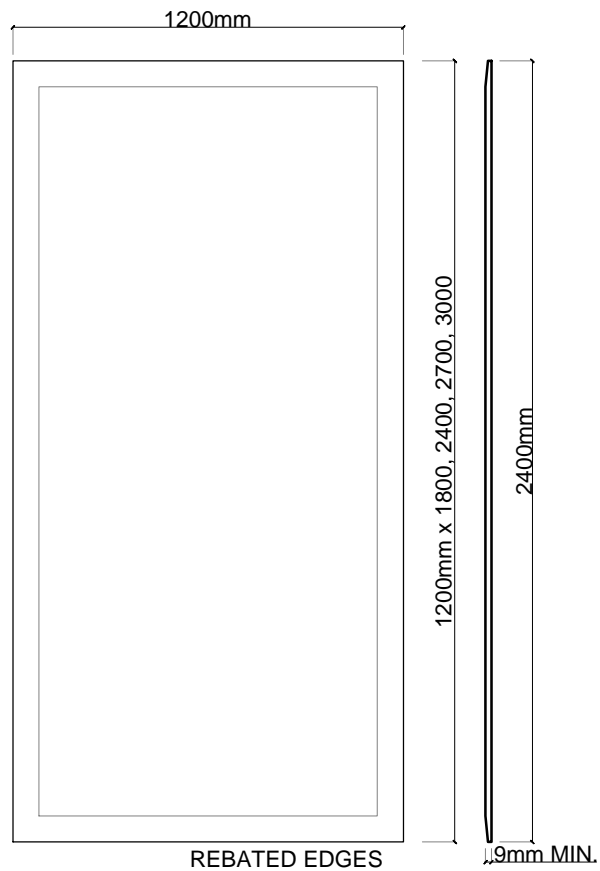

MIN.SHEET SIZES - 7.5 & 9mm AVAILABLE

SCALE NTS

**STO/  
MONOTEK**

**STOARMAT CONSTRUCTION SYSTEM  
FIBRE CEMENT SHEET INFORMATION**

**MFCS 006**

**2014**