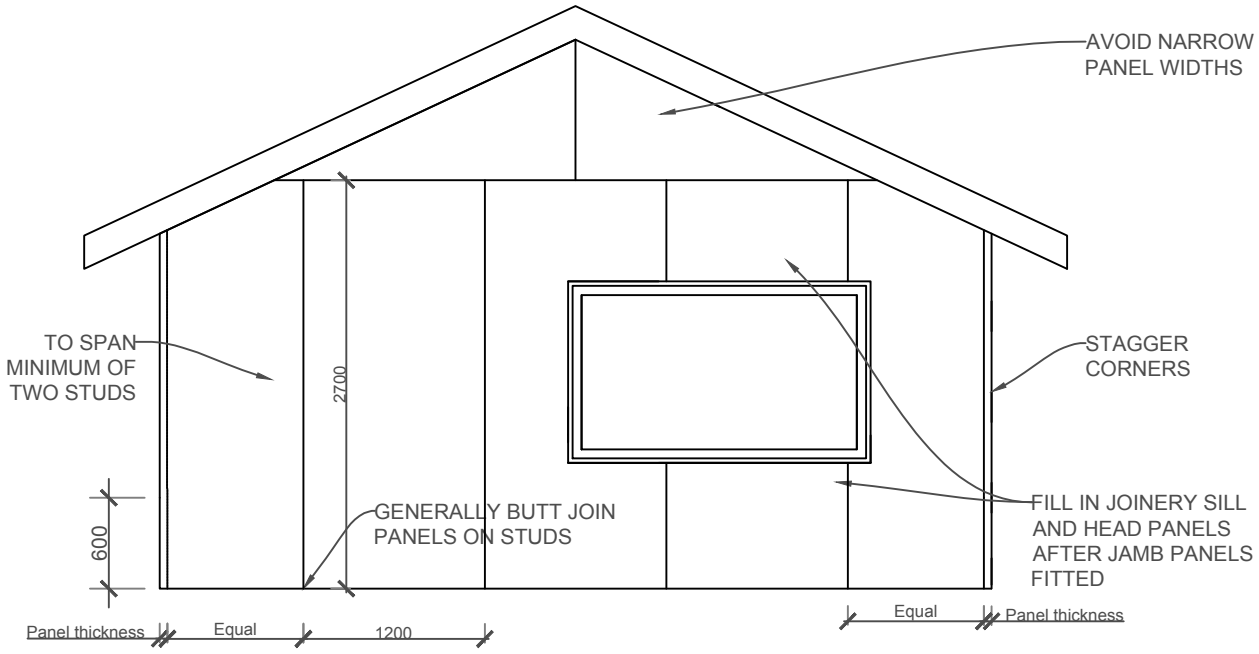

NOTE: USE FULL PANELS WHERE POSSIBLE.
ALL PANEL CUTS SHALL BE CAREFULLY MADE TO ACHIEVE A TIGHT BUTT FIT.
ALL PANEL JOINTS MUST BE FLUSH FILLED WITH STO FOAM TAKING CARE NOT TO FILL THE CAVITY.
MECHANICALLY FIX ALL PANELS WITH STOTHERM FIXINGS AT MAXIMUM 300mm CENTRES.
PANELS TO BE SUPPORTED BY MINIMUM TWO STUDS OR BLOCKING.
VERTICAL CONTROL JOINTS ARE REQUIRED ON WALLS OVER 20 METRES LONG, SEE STO DETAILS.
HORIZONTAL CONTROL JOINTS AT INTERSTOREY JUNCTION IF UNSEASONED JOISTS USED.
HORIZONTAL DRAINED JUNCTION REQUIRED AT THIRD STOREY OR 7 METERS INCLUDING GABLES.

N.T.S

STOTHERM SYSTEM	STOTHERM INSULATED FACADE SYSTEM	ST 300
	STOTHERM PANEL LAYOUT	2017

The information contained on this page is based on our experience and research at the date of issue. The detail is for use by Registered Architects, Licensed Designers or Chartered Engineers to assist in developing project details using Sto Systems. Stoanz Ltd reserve the right to alter or update information at any time without prior notice and it is the responsibility of the designer, project manager or Sto contractor to insure they have and use the current Sto details and specifications on site.